




DRYVAC FP Hygienic

Food Processing and Packaging

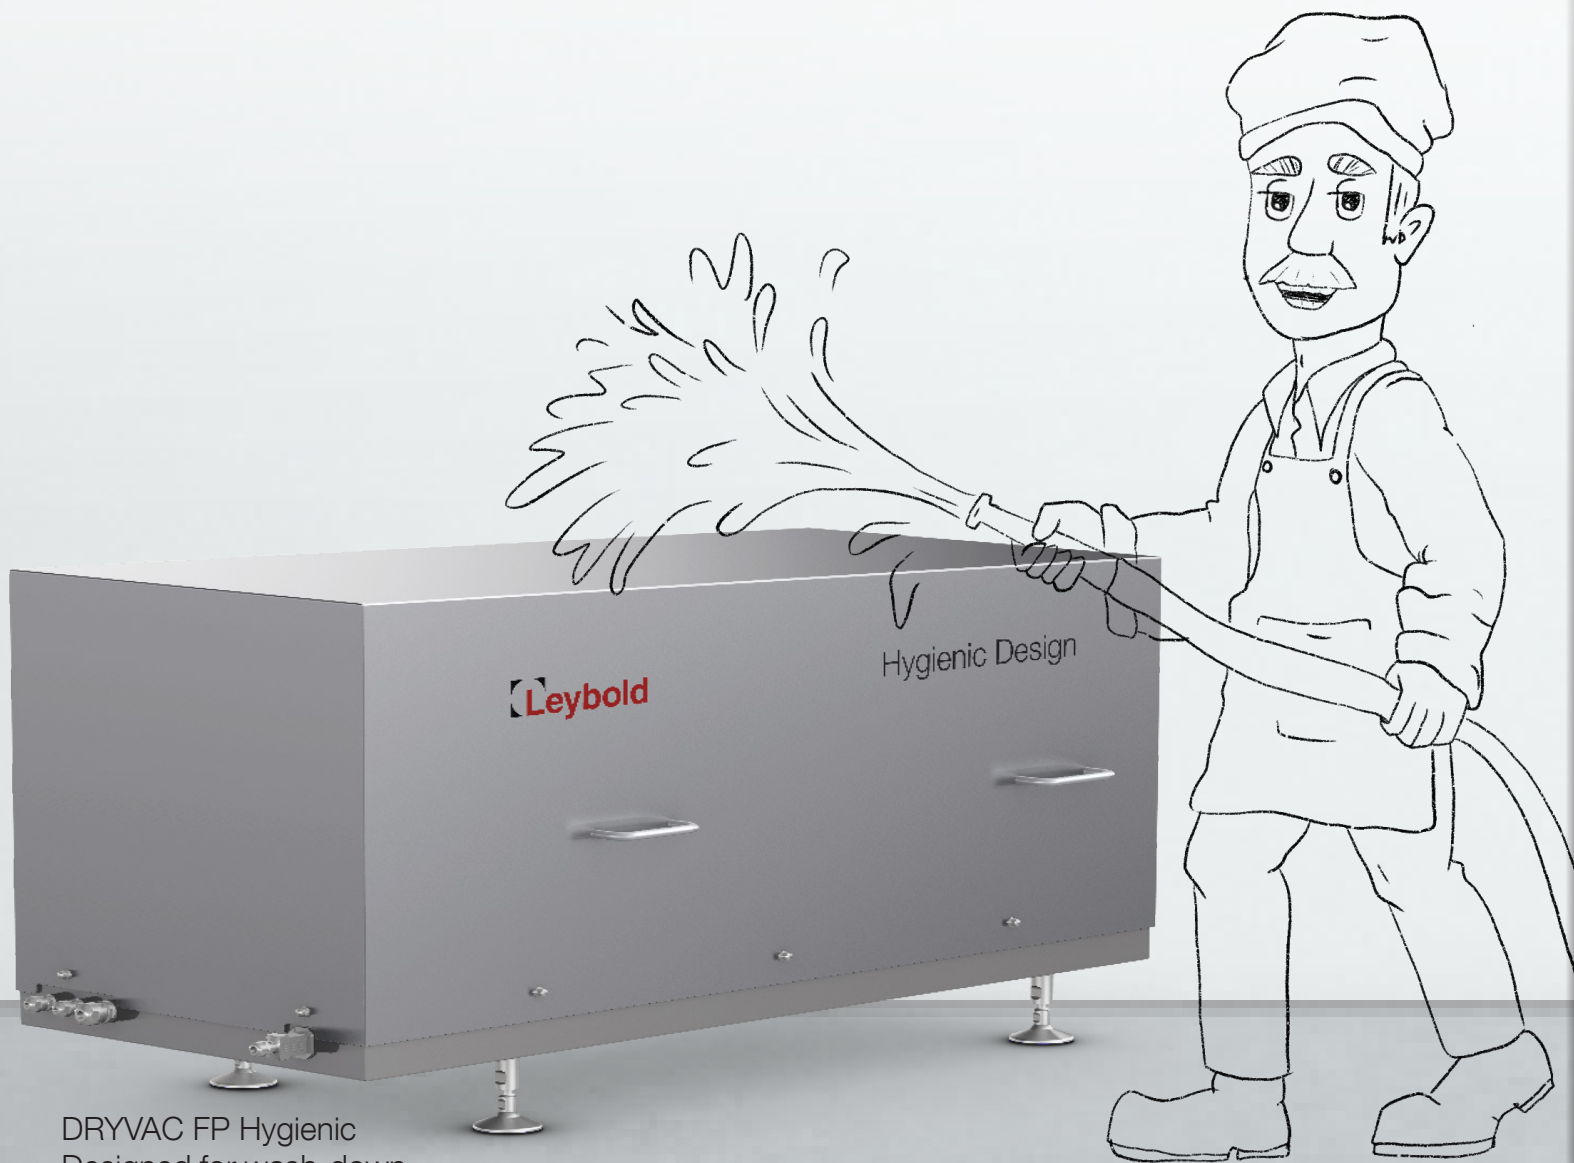

DRYVAC FP Hygienic
Designed for wash-down



DRYVAC FP Hygienic

TECHNICAL DATA


		DRYVAC FP Hygienic
Nominal pumping speed	m ³ x h ⁻¹	650
Ultimate pressure	mbar	<0.005
Maximum permissible water vapor capacity	kg x h ⁻¹	25
Power demand at end-pressure, with E-Saver	kW	< 3,5
without E-Saver		< 7
Motor power	kW	15
Noise level	dB(A)	<65
Cooling		Water
Connection		G3"
Intake side		G3"
Pressure side		G3"
Net weight	kg	790
Dimensions	(W x H x D)	1468 x 773 x 568

Designed for local installation in food processing area:

- Lowest heat emission into air-conditioned room or towards food
- Designed for installation inside wash-down areas, resistant against all cleaning agents
- Very silent operation
- Extreme compact design
- Plug and Play functionality
- Easy installation and operation
- Faster pump-down by shortest pipework

Lowest cost of ownership

- Most robust dry compressing screw-type vacuum pump
- Highest uptime by design
- Minimized maintenance demand
- Higher production capacity
- Lowest energy demand
- Save operation costs
- Optional E-Saver device:
Reduce your power demand by up to 50%

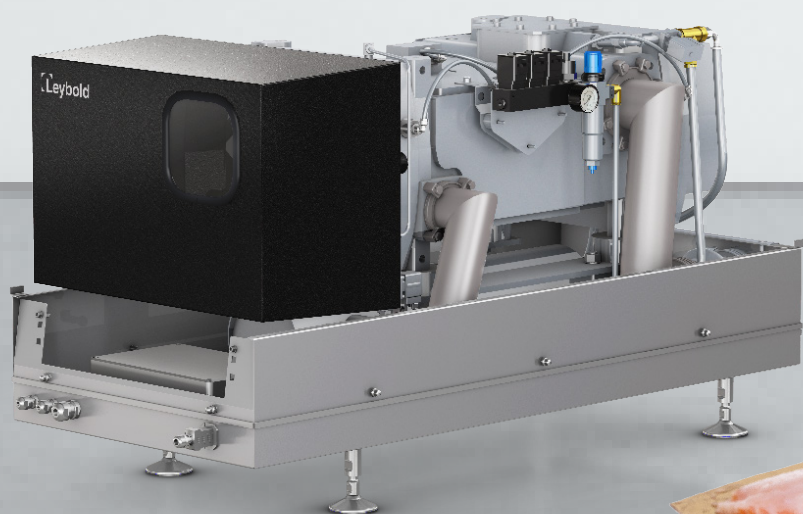

 **Leybold**

Pioneering products. Passionately applied.